



P.O. Box 815
Dowagiac, MI 49047
Phone (269) 782-9670
Fax (269) 782-9623

Model 3024

Abrasive Blast Cabinets

WARNING: Cyclone Blast cabinets produce a powerful flow of abrasive particles. To avoid personal injury and property damage, read this manual thoroughly before operating. Keep manual handy for future reference and replacement parts list. These units are made for use with dry abrasive media only' Never mix fluids with blast media.

INTRODUCTION

Cyclone Manufacturing abrasive blast cabinets are designed for cleaning, polishing and finishing with dry abrasives such as glass beads, aluminum oxide, blasting garnet and sand. An exterior switch controls the interior light. The cabinet is sealed at all openings, such as the lid, window and bottom hopper. The blasting system can produce finishes from dull to shiny. An interior trigger gun controls air flow, depressing the trigger allows air flow into the mixing head where it is mixed with the blasting media and forced out the nozzle.

WARNINGS AND CHECK LIST

- Always close cabinet door before blasting.
- Check to make sure all air connections are secure.
- **Never** operate over 120 psi.
- Clean up abrasive media from floor and around blasting area. Media is very slippery and can be very hazardous if not cleaned up.
- Check the canister of the dust collector frequently and clean as necessary.
- To prepare the system, pour 10-15 lbs. of abrasive media into hopper.
- Excessive air pressure could strain the air supply system and cause rapid deterioration of the media.
- Clean soft metals and delicate parts at lower pressures to prevent undesirable peering. Higher pressures may be used for harder or non-critical parts that require rapid cleaning.
- For best results and to insure even finishing, keep the blast stream moving across all surfaces. A circular motion works well. Hard to clean areas require a more concentrated blast.
- **DO NOT USE STEEL SHOT IN BLAST CABINETS. IT COULD CAUSE DAMAGE TO THE BLAST CABINET.**

HOW TO ASSEMBLE AND INSTALL

1. Open lid of cabinet and screw light bulb into socket located in the top portion of the cabinet.
2. Plug the canister dust collector into the outlet next to the switch.
3. Attach the dust collector hose to the 1 1/4" hole on the upper left hand side to the cabinet
4. Plug cabinet into properly grounded outlet. CAUTION! This cabinet has a 3-prong grounded plug to protect against shock. It should be plugged into an adequately grounded 3-prong receptacle. If only a 2-prong wall receptacle is available, a ground adapter can be used. Make sure the green lead from the adapter is properly attached to a suitable electrical ground such as a grounded water pipe, properly grounded metallic raceway or grounded wire system. NOTE: The Canadian Electrical Code prohibits the use of 3-prong adapters.
5. Attach the air supply to the inlet connection. The blast cabinet must be linked to an air compressor capable of supplying a minimum of 14CFM at 100psi for continuous use.

SUGGESTIONS:


- Obey all applicable electrical and safety codes including the National Electric Code (NEC) and the Occupational Safety and Health Act (OSHA).
- Use extension cords that are in good condition to avoid electrical shock.
- Read manual before operating or plugging in abrasive blast cabinet.
- Always unplug blaster before changing light bulb to avoid electrical shock or damage to lampholder.
- Always check air vents in rear of cabinet for blockage.
- Abrasive media can wear out. Replace when it is powdery or if it is not cleaning well.

MAINTENANCE:

- Disconnect air and power before maintenance.
- Clean inside of cabinet periodically. Detach abrasive hose from gun. Use air supply to dislodge any media deposits in cabinet, let the optional dust collection system clear the blaster.
- The view window may become frosted or cloudy causing decreased visibility. Replacement windows are available at your Cyclone dealership. Make sure to observe the window removal for installation techniques.
- The lid gasket may tend to wear or get damaged. Remove old gasket, clean surface and place new gasket in its place.
- Empty the canister dust collection system often and inspect filters. Replacement filters are available at *your* Cyclone dealership. An unmaintenanced canister could result in meter burn out!

TROUBLE-SHOOTING YOUR BLASTER

Problem	Cause	Remedy
Excessive Dust	Dust collection system malfunctioning	Empty canister & replace, or clean filter bag
	Abrasive media worn out	Replace media
	Too much media	Remove excess
Uneven blasting action	Too much media	Remove excess media
	Moisture present in air line	Install moisture trap
	End of abrasive hose covered	Move media away from end of tube
Inadequate speed or efficiency of blast	Media worn out	Replace media
	Worn out gun parts	Inspect parts; adjust or replace
Poor blast pattern	Nozzle worn	Replace nozzle
Static electricity	Dry weather conditions	Install static electricity band

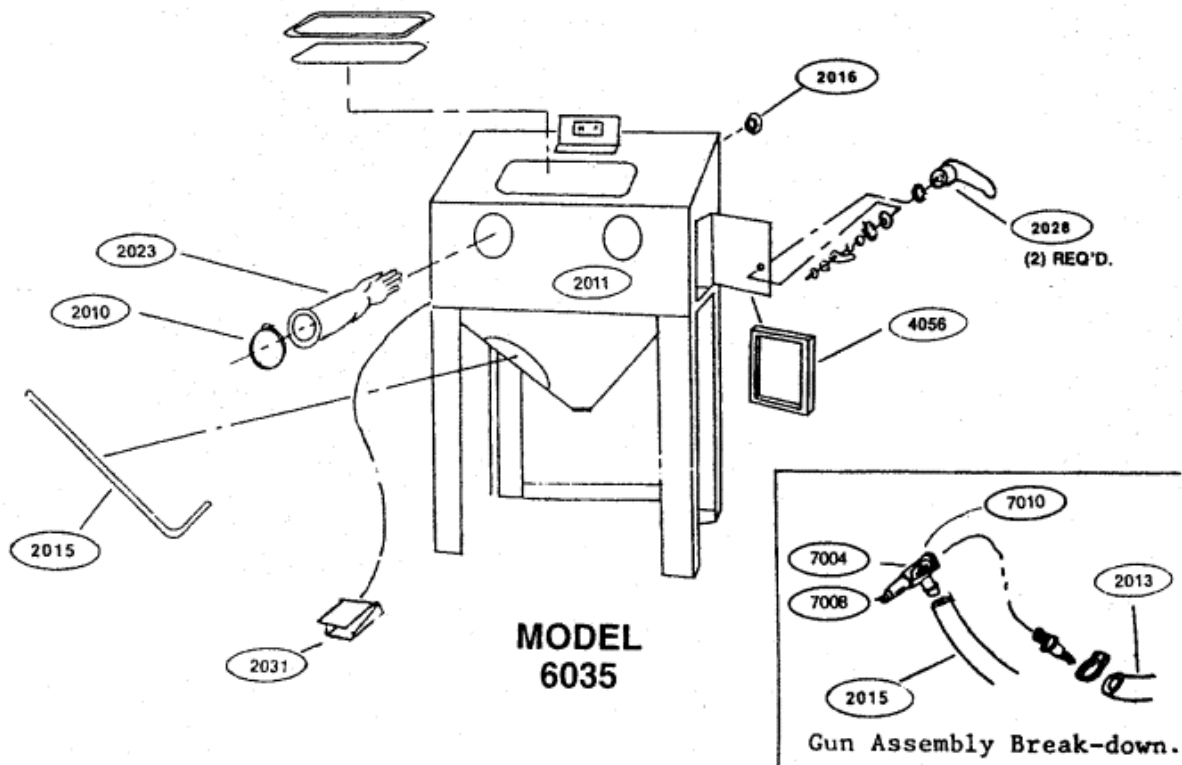

Warranty:

Cyclone abrasive blast cabinets are warranted against defects in workmanship or materials in accord with the following terms and conditions:

- Warranty extends to the original user only and does not cover cabinets used in commercial rentals.
- Warranty is valid for (1) year following date of purchase.
- Warranty does not cover normal wear parts such as nozzles, orifices, windows or abrasive media.
- Warranty does not cover misuse or operation not in compliance with these instructions.
- **WARRANTY DOES NOT COVER DAMAGES IN TRANSIT!! IN CASES OF SUCH DAMAGE, REFUSE SHIPMENT AND CALL THE FREIGHT COMPANY IMMEDIATELY! THEN FILE A CLAIM WITH THE FREIGHT COMPANY. FAILING TO OPEN BOXES UPON DELIVERY CAN LEAD TO CONCEALED DAMAGE - WHICH MOST FREIGHT COMPANIES WON'T PAY FOR!**

Users should call the Cyclone dealer upon inspection of a problem. A Cyclone technical person will assist you.

This warranty grants the user(s) certain legal rights. Users and purchasers may also be protected by other rights which vary with location.

Note: Except for the warranties set forth above, CYCLONE makes no other warranties of any kind, express or implied. Including warranties of merchantability of fitness of product for a particular purpose.

Items listed may be accessories as well as standard parts

Replacement Parts List

2006	View Window
2008	Window Frame
4056	Window/Door Gasket
2005	Clamp
2012	Plastic Glove Insert
2015	Abrasive Hose w/Tube Specify Model
2016	3" Vent
2023*	24" Gloves
2028	T -Handle Assembly
2031*	Foot Valve Assembly
2047*	Pack of 12 View Shields
2053	5 Gallon Vac
2013	Air Hose
7001	14 CFM Trigger Gun Assembly
7002*	5 CFM Trigger Gun Assembly
7009*	5 CFM Ceramic Nozzle
7011	14 CFM Ceramic Nozzle
7076*	5 CFM Steel Orifice
7077	14 CFM Steel Orifice
7080*	14 CFM TC Nozzle
7084*	5 CFM TC Nozzle
2022	18" Unlined Gloves

*accessories must be purchased separately.